

### DMX channel modes:

Channel			Value	Function	
04	06	09			
	1	1	000-255	Master dimmer (0-100%)	
1	2	2	000-255	Red (0-100%)	
2	3	3	000-255	Green (0-100%)	
3	4	4	000-255	Blue (0-100%)	
4	5	5	000-255	White (0-100%)	
		6	000-015	No function	
			016-031	Red	
			032-047	Green	
			048-063	Blue	
			064-079	White	
			080-095	Amber	
			096-111	Orange	
			112-127	Yellow	
			128-143	Purple	
			144-159	Pink	
			160-175	Cyan	
			176-191	Pastel Red	
			192-207	Pastel Green	
			208-223	Pastel Blue	
			224-239	Warm White	
240-255	Cool White				
		7	000	No function	
			001-019	Program 02	
			020-039	Program 03	
			040-059	Program 04	
			060-079	Program 05	
			080-099	Program 06	
			100-119	Program 07	
			120-139	Program 08	
			140-159	Program 09	
			160-179	Program 10	
			180-199	Program 11	
			200-219	Program 12	
			220-239	Program 13	
			240-255	Program 14	
			000-255	Program 15	
		8	000-255	Speed (slow-fast)	
	6	9	000-010	No function	
			011-255	Strobe (slow-fast)	